

NP-1660 Photographic Network Printer

Product Description

The NP-1660 Photographic Network Printer is an intelligent, dye diffusion/direct thermal dual mode, color and gray-scale output device which provides both 10Mb/s Ethernet and Centronics compatible parallel interfaces. The printer accepts many industry standard file formats and includes built-in image processing and spooling capabilities.


Specifications

Print Technology:	Dye diffusion and direct thermal.
Resolution:	300 dpi (11.8 pixels/mm).
Color Output:	16.7 million colors 256 levels each of cyan, magenta, and yellow (optional laminate overcoat).
Grayscale Output:	256 levels, dye diffusion and direct thermal media support.
Density Range:	Media dependent, see media carton for specifications.
Interfaces:	Ethernet: AUI 15-pin connector. Parallel: Centronics type 36-pin connector.
Network Protocols:	Standard: FTP, LPR, Telnet (TCP/IP), Apple EtherTalk.
Image Formats:	Standard: TIFF, GIF, PCX, BMP, PBM, PGM, PPM, XWD, JPEG, Sun Raster, SGI RGB, Targa. Optional: PostScript, Catia.
Image Scaling:	Box, Bilinear, Bicubic, Mitchell, and Lanczos, software selectable.
Image Rotation:	90 degrees, software selectable.
Image Correction:	Gamma, contrast, antialiasing (PostScript), TCR, Monitor Color Matching, selectable from front panel or via software.
Image Formatting:	Variable Multiformating (VMF), Fixed Multiformating (FMF), 35mm SlideMaker, Captions, and Bracketing
Front Panel:	16-character LCD, Power, and Fault indicators, Online and Cancel buttons.
Memory:	96MB (16MB RAM, 80MB virtual).
Disk:	1.2 GB (950MB available for spooling).
Floppy Drive:	Built-in for software upgrades.
Cassettes:	One adjustable cassette included with printer. 100 sheet capacity, paper or transparency. Single sheet bypass feed.
Media Sizes:	7 sizes; from 8 x 10 in. to 8.5 x 14 in.
Power:	Autosensing, 90-264 VAC, 47-63 Hz, 250 Watts.
Weight:	60 lbs.
Dimensions:	12" H, 17" W, 21" L.

Printer and Cassette



Back Panel

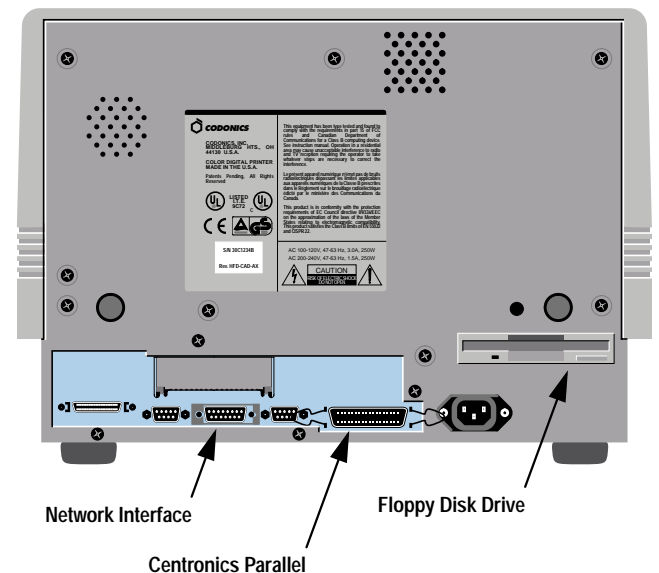

Get it all with just one call
1-800-444-1198



17991 Englewood Drive
Middleburg Heights, OH 44130 USA
216/243-1198
216/243-1334 Fax
Email info@codonics.com